
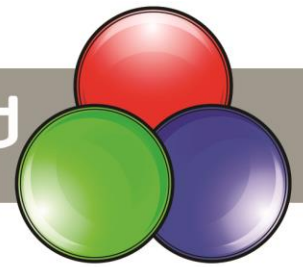 


TECHNICAL DATA

Wi-Fi Remote Control


| Specification | Product |
|------------------------|---|
| |  |
| Product code | CL-RGBW-RF-R |
| Description | 8 zone touch screen RF wireless RGBW LED remote controller |
| Features: | <ul style="list-style-type: none"> • User-friendly interface, easy and simple operation • Control up to 8 zones with this USB LED Controller • Set 8 scenes at each zone • Operation return function • Preset 10 changing modes, with pause function • Synchronization of constant colour changes • Speed and brightness control • Control synchronously after installing software on iPhone, iPad, Android • NB: Bluetooth version not recommended due to instability |
| Charging | Via USB cable supplied |
| Quality | |
| CE and RoHS certified | Yes |
| Warranty | 2 years |
| Dimensions (mm) | |
| Length | 116 |
| Width | 59 |
| Depth | 12 |
| Material | Black high gloss plastic |






Wiring Diagram

 1) Receiver Connection Diagram for Single Unit

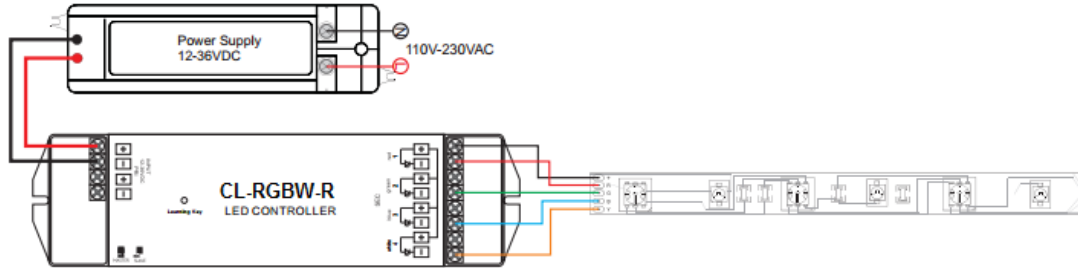


 2) Receiver Connection Diagram for Multiple Units

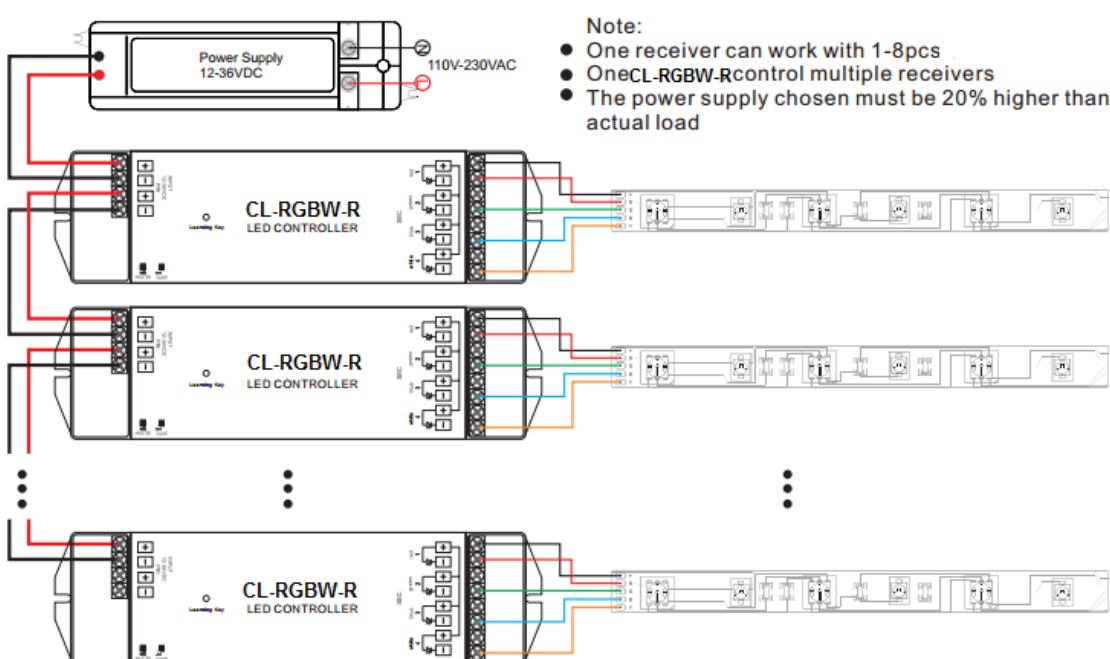

Note:

 - One receiver can work with 1-8pcs
- One CL-RGBW-R control multiple receivers
- The power supply chosen must be 20% higher than the actual load

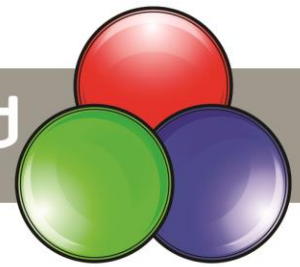

Operation

Learning (matching)

- Do wiring according to connection diagram
- Wake up the remote control by touching ON/OFF button.
- Press learning button on receiver.
- Touch any zone button on remote control.
- Then touch color wheel.
- Connected LED light will blink to confirm zone designation.
- Press at learning button on receiver over 5 seconds until LED light flash, then delete the learned ID.

Note 1: To choose a master from slaves by jumper for each zone.

Short circuit for master.

Open circuit for slave.

Each zone only can set one master controller. After a period of time, the master will do synchronization operation to keep the same color or mode of all slaves in one zone.

Note 2: Each remote control 8 zones (areas) receivers, each area can be learned as many receivers as we can.

Each receiver maximally can be controlled by 8 different remote controllers.


RGBW Button


Touch **R G B W** button is to switch on/off of each corresponding color.

Hold your finger on **R G B W** button to dim brightness of each corresponding color. There are total 8 levels of brightness.


Note: If you press R, then press G, then it is mix color of R and G. If you want to get G color directly, please press R to switch off of R first. Then press G.

Running&Pause Button

 
- Press pause&run button  ,mode will run. Press it once , it runs one mode. Press button again, it stops, then press one more time, it will enter next mode. There are total 10 build-in modes.
- Pause&run button can work with button **S** , it can save modes into different zone.
- Touch button **1 2 3 4** one by one, such as press button 1,2,3,4,5,6, then **5 6 7 8**

Press  button. 1,2,3,4,5,6 will run synchronized mode, after long press, LED lighting will flash twice, they will switch to chasing running mode, long press again to switch back.

Return button

Touch  button to return previous color or running mode.

Speed up and Speed down Button

Touch button  to speed down when mode is running, touch button  to speed up when mode is running.

 
Brightness down or up button

Long touch button  to dim down brightness of RGB channels, Long touch  button to dim up RGB channels.


"W" channel is separated from RGB channels, so we can only long touch button to dimming "W" channel.

Save Button


a. How to save color into different position per zone?

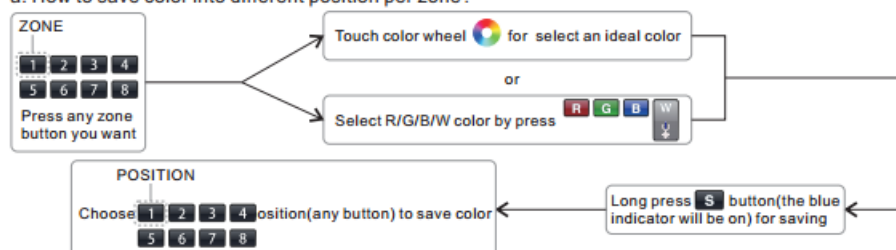

 For example, press zone button 1, then touch color wheel for orange color, then press S button (the blue indicator will be on), then choose position button 3. That's to say, we save orange color from zone 1 into position 3. So each zone can save 8 colors. 8 zones can save 64 colors.

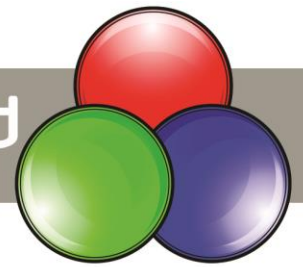

 How to save mode into different position per zone

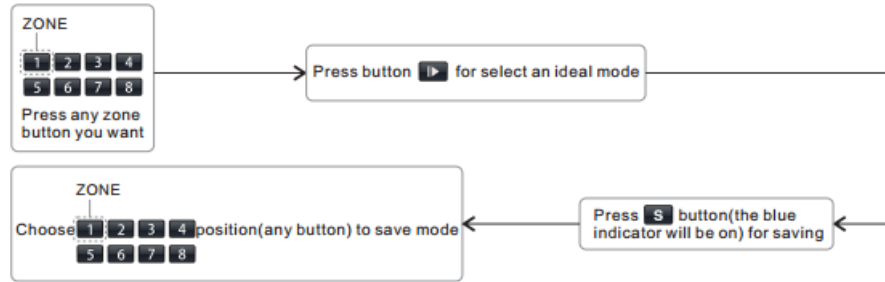

c. Recall

Choose zone number form **1 2 3 4** , then press **S** button, and press the position button which color or mode saved into. **5 6 7 8**

If the remote control is not used for a long time, need to charge it every two months.

Safety & Warnings

- 1) The product shall be installed and serviced by a qualified person.
- 2) IP20. Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- 3) Always be sure to mount this unit in an area with proper ventilation to avoid overheating.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Never connect any cables while power is on and always assure correct connections to avoid short circuits before switching on.
- 6) Please ensure that the cable is secured tightly in the connector
- 7) For update information please consult your supplier.
- 8) The warranty of battery is 1 year.